


PS-482/484/488 Order code

June 25, 2021

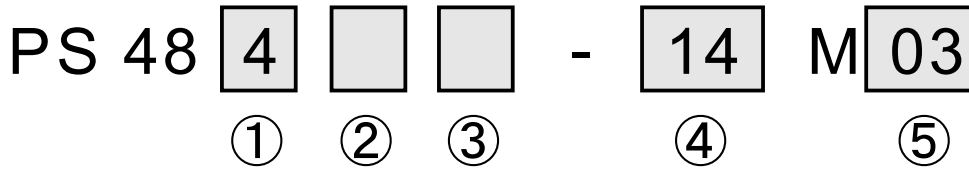

① Channels

	Contents
2	PS-482 (2CH)
4	PS-484 (4CH)
8	PS-488 (8CH)

② Instruction manual language

	Contents
Blank	Only Japanese
E	English + Japanese
C	Chinese + Japanese

③ Option

	Contents
Blank	Nil
B	With connector for reading ID tag

※ID reader and ID tag are purchased separately.

④ Model of Sensor head

Sensor heads for the number of channels are belongings.


	Contents		Contents
13	PS-4013	27	PS-4027
14	PS-4014	28	PS-4028
18	PS-4018	29	PS-4029
20	PS-4020	31	PS-4031
24	PS-4024	32	PS-4032
25	PS-4025	33	PS-4033
26	PS-4026	34	PS-4034

● Standard accessories

Name
Terminal block cover
Anti-vibration rubber 4pcs
Standard bracket
12-core wiring cable (5 m)
Grounding wire (8m)
Instruction Manual

● Service parts

Name	Model	Contents
Front panel	PS482-FP	Front panel of PS482
Front panel	PS484-FP	Front panel of PS484
Front panel	PS488-FP	Front panel of PS488
Power supply unit	PS48X-PW	Power supply unit is used inside PS482/PS484/PS488

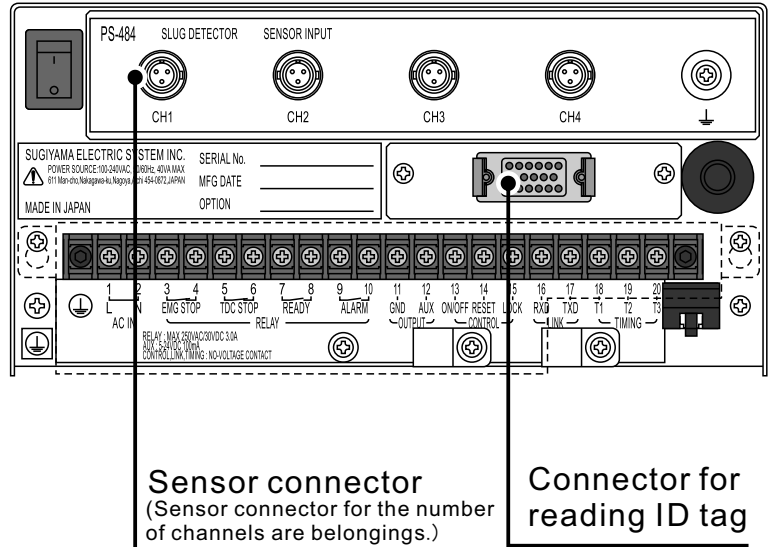

⑤ Length of the sensor cable

Sensor connection cables for the number of channels are belongings.

	Contents
03	3m (Standard)
05	5m
10	10m

PS-482 : blue,red one each
 PS-484 : blue,red,white,yellow one each
 PS-488 : blue,red,white,yellow two each

Please contact our sale department for inquiries or