

PS-464/462 Order code

Oct-26-2016



We changed wiring method of PS462/464 from 12P output connector and terminal block to merely terminal block due to production stoppage of present output connector for them. After change the wiring method, "T" is added behind the number of channels.

PS 464 T E - 14 M03

Sensor Channels

	Contents
462	2 channels
464	4 channels

Panel language

	Contents
Blank	<p>Japanese</p>
E	<p>English</p>
C	<p>Chinese</p>

Option specification

	Contents
Blank	Nil
A	<p>Analog unit</p> <p>This unit is for reading an analog signal of PS-462T/464T from the rear of them. Available for monitoring the analog signals by using oscilloscope and so on.</p>

Length of the sensor cable

Sensor connection cables for the number of channels are belongings. Please make a selection of the length of them.

	Contents
M03	3m (Standard)
M05	5m
M10	10m

* The color of the cable.
 PS-462T: blue, red
 PS-464T: blue, red, white, yellow

Model of Sensor head

Sensor heads for the number of channels are belongings. Please make a selection of the model of them.

	Model
13	PS-4013
14	PS-4014
18	PS-4018
20	PS-4020
24	PS-4024
25	PS-4025
26	PS-4026
27	PS-4027
28	PS-4028
29	PS-4029
31	PS-4031
32	PS-4032
33	PS-4033
34	PS-4034

Standard attachments

- Instruction manual
The language of the instruction manual is as well as the panel language.
- Output cable 12P 5m(PS015-5)

Please contact our sale department for inquiries or information.