AMSTAD PS-474P/478P Order code

June 3, 2026

PS47 [4] P - [ ] [ ] - [14] M [03] - [ ]

① ② ③ ④ ⑤ ⑥

①Channels

	Contents
4	PS-474P（4CH）
8	PS-478P（8CH）

②Instruction manual language

	Contents
Blank	Only Japanese
E	English + Japanese
C	Chinese + Japanese

③Option

	Contents
Blank	Nil
B	With connector for reading ID tag

※ID reader and ID tag are purchased separately.

④Model of Sensor head

Sensor heads for the number of channels are belongings.

	Contents
13	PS-4013
14	PS-4014
18	PS-4018
20	PS-4020
24	PS-4024
25	PS-4025
26	PS-4026

	Contents
27	PS-4027
28	PS-4028
29	PS-4029
31	PS-4031
32	PS-4032
33	PS-4033
34	PS-4034


⑤Length of the sensor cable

Sensor connection cables for the number of channels are belongings.

	Contents
03	3m（Standard）
05	5m
10	10m

PS-474P： blue,red,white,yellow one each
PS-478P： blue,red,white,yellow two each

Sensor connector
(Sensor connector for the number of channels are belongings.)

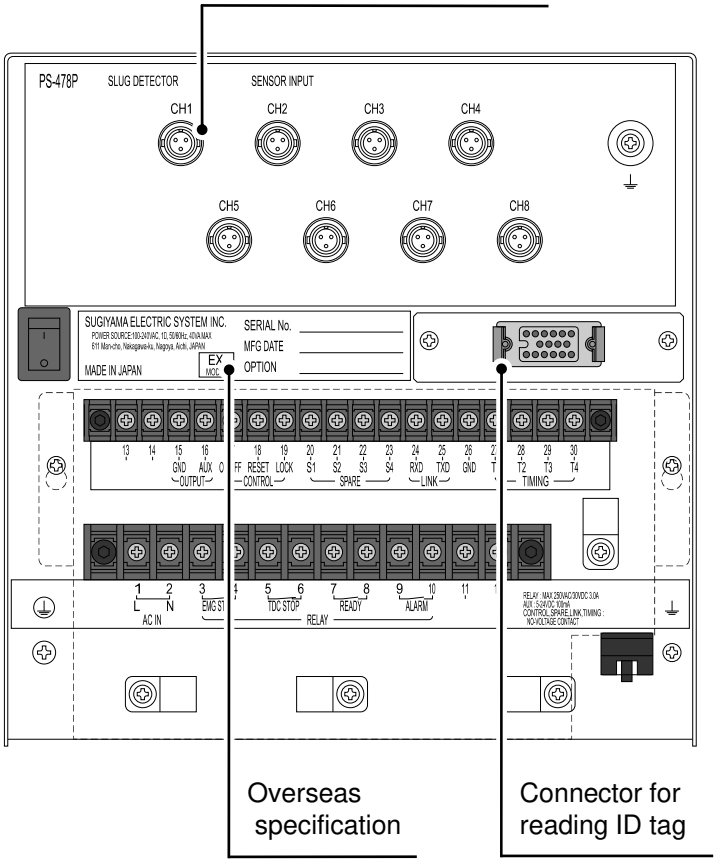

⑥Overseas specification

	Contents
Blank	Domestic specification（When the reference value is fixed, resolution is 0.1 μm）
EX	Overseas specification（When the reference value is fixed, resolution is 0.5 μm）

●Standard accessories

Name
Terminal block cover
Anti-vibration rubber 4pcs
Standard bracket
12-core wiring cable （5 m）
Grounding wire （8m）
Instruction Manual

Please contact our sale department for inquiries or information.

SUGIYAMA ELECTRIC SYSTEM INC.
Head Office : 611Man-cho Nakagawa-ku Nagoya Aichi 454-0872 Japan TEL : 81-52-363-0501 E-mail:sales@sugiden.com