PS-482/484/484 Order code


June 3, 2026

PS48 [4] [ ] [ ] - [14] M [03]

① ② ③ ④ ⑤

①Channels

	Contents
2	PS-482（2CH）
4	PS-484（4CH）
8	PS-488（8CH）

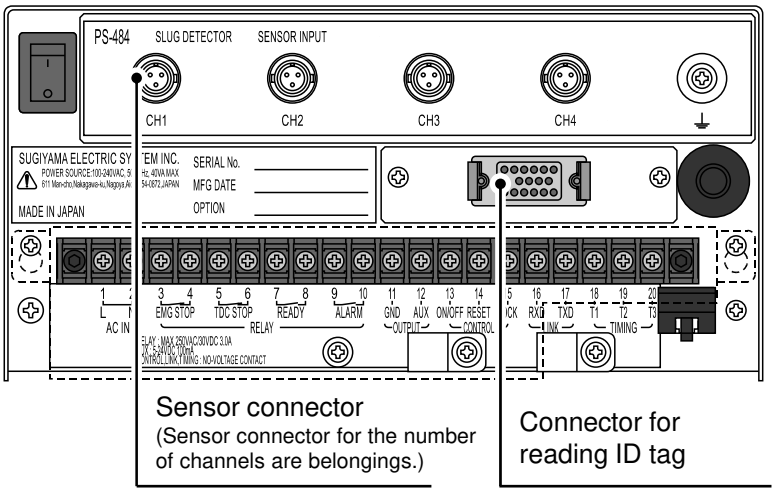

Sensor connector
(Sensor connector for the number of channels are belongings.)

Connector for reading ID tag

②Instruction manual language

	Contents
Blank	Only Japanese
E	English + Japanese
C	Chinese + Japanese

③Option

	Contents
Blank	Nil
B	With connector for reading ID tag

※ID reader and ID tag are purchased separately.

④Model of Sensor head

Sensor heads for the number of channels are belongings.

	Contents
13	PS-4013
14	PS-4014
18	PS-4018
20	PS-4020
24	PS-4024
25	PS-4025
26	PS-4026

	Contents
27	PS-4027
28	PS-4028
29	PS-4029
31	PS-4031
32	PS-4032
33	PS-4033
34	PS-4034

⑤Length of the sensor cable

Sensor connection cables for the number of channels are belongings.

	Contents
03	3m（Standard）
05	5m
10	10m

PS-482 : blue,red one each
PS-484 : blue,red,white,yellow one each
PS-488 : blue,red,white,yellow two each

● Standard accessories

Name	Contents
Terminal block cover	
Anti-vibration rubber 4pcs	
Standard bracket	
12-core wiring cable （5 m）	
Grounding wire （8m）	
Instruction Manual	

● Service parts

Name	Model	Contents
Front panel	PS482-FP	Front panel of PS482
Front panel	PS484-FP	Front panel of PS484
Front panel	PS488-FP	Front panel of PS488
Power supply unit	PS48X-PW	Power supply unit is used inside PS482/PS484/PS488

Please contact our sale department for inquiries or information.

SUGIYAMA ELECTRIC SYSTEM INC.
Head Office : 611Man-cho Nakagawa-ku Nagoya Aichi 454-0872 Japan TEL : 81-52-363-0501 E-mail:sales@sugiden.com