PS-682 Malfunction detector Order code

June 3, 2026

PS682 □ □ □ - 01

① ② ③ ④

①Instruction manual language

	Contents
Blank	Only Japanese
E	English + Japanese
C	Chinese + Japanese


②Option1

	Contents
Blank	Standard spec
R	Spec of additional input to rear panel *Change from T to R after April 2024

③Option2


	Contents
Blank	Nil
B	With connector for reading ID tag

*ID reader, ID tag, and cable with connector are sold separately.

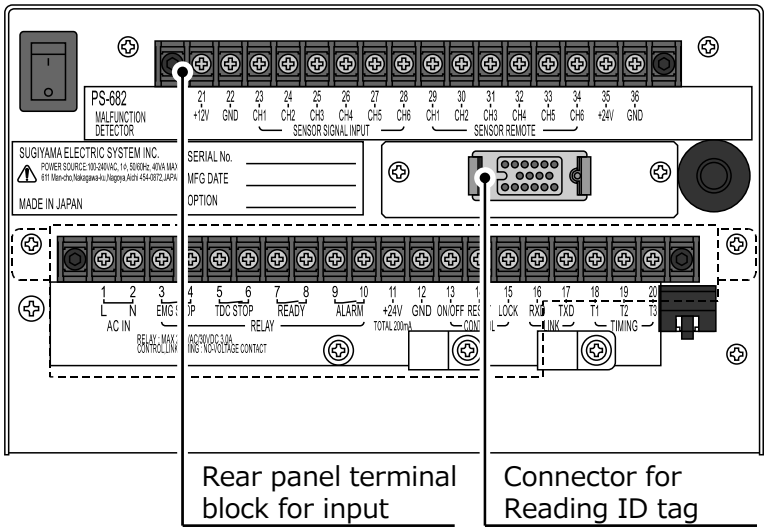


Rear panel terminal block for input

Connector for Reading ID tag




USD-1




USD-2

④Accessory of sensor

	Contents
01	・USD-1(Pink,Yellow) : one each ・USD-2(Red) : 1 ・DINP-1J(White) : 1 ・DINP-3J(Black) : 2 Total 6 pcs
02	・USD-1 (Pink,Orange,Yellow, Blue,White) : one each ・USD-2(Red) : 1 Total 6 pcs



DINP-1J
(Pin plug - DIN plug conversion cable)



DINP-3J
(3-prong plug - DIN plug conversion cable)

●Standard accessories

Name
Terminal block cover
Anti-vibration rubber 4pcs
Standard bracket
12-core wiring cable (5 m)
Grounding wire
Instruction Manual

●Service parts

Name	Model	Contents
Front panel	PS682-FP	Front panel of PS682
Power supply unit	PS682-PW	Power supply unit is used inside PS682

Please contact our sale department for inquiries or information.

SUGIYAMA ELECTRIC SYSTEM INC.
Head Office : 611Man-cho Nakagawa-ku Nagoya Aichi 454-0872 Japan TEL : 81-52-363-0501 E-mail:sales@sugiden.com